AUTOMATIC Self-Cleaning Litter Box

LITTER MAID®

SINGLE-CAT
under 15 lbs.

ELITE SERIES

FOR SINGLE-CAT HOUSEHOLDS

Customer *Care* Line:

USA/Canada
1-800-231-9786

Accessories/Parts
(USA / Canada)
1-800-738-0245

For **online customer service** and to **register** your product, go to **www.prodprotect.com/applica**

1 YEAR LIMITED WARRANTY

MODEL

❍ LME5500

PLEASE READ AND SAVE THIS USE AND CARE BOOK.

IMPORTANT SAFEGUARDS

Caution: Clumping litter is not intended for use with kittens under six months. If your kitten is under six months, always use litter formulated for kittens and leave your LitterMaid® litter box OFF until the kitten is the appropriate age.

Warning -- When using electrical appliances, basic precautions should always be followed, including the following:

- Please read all directions in this manual carefully prior to operating this product.
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Do not contact moving parts.
- Only use attachments recommended or sold by the manufacturer.
- Do not use outdoors.
- To reduce the risk of electric shock, do not put LitterMaid® litter box in water or other liquids.
- Do not place or store appliance where it can fall or be pulled into tub or sink.
- Not intended for use by handicapped, incapacitated or older cats that may experience difficulty in entering or leaving the litter box.
- Pregnant women and immune-deficient people should avoid contact with cat waste at all times.
- **Caution: This is not a toy!** Never allow small children to play in or around this device.
- Your LitterMaid® self-cleaning litter box is a precision-operated appliance. Should the rake become jammed during cleaning, the unit contains a mechanism that will automatically stop, reverse and restart the cleaning operation (see TROUBLESHOOTING for more information).
- For cat use only and intended solely for the safe elimination of cat waste. Do not attempt to use this product for any other purpose.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

WELCOME TO THE LITTERMAID FAMILY!

Thank you for purchasing a LitterMaid® Self-Cleaning Litter Box! This Use & Care book will provide useful information on operating and maintaining your litter box, finding accessories, and troubleshooting for common issues.

In addition to this Use & Care book, our website also provides expanded information on a number of topics. As you're reading this book, you will see this icon with an article title when the website provides additional information on that topic. Simply visit our website at www.littermaid.com and look for the title provided.

If you have any additional questions or concerns and cannot find the information you need either here or on our site, please call our customer care line at 1-800-231-9876.

TABLE OF CONTENTS

Section	Page
Getting to Know Your LitterMaid® Litter Box:	
• Litter Box Parts	5
• Control Panel	6
• Included Accessories	8
• Additional Accessories for Purchase	8
Selecting Litter	9
Acclimating Your Cat	9
How to Use	10
• Getting Started	10
• Assembly	10,11
• Preparing the Waste Receptacle	11
• Filling the Litter Tray	11,12
• Attaching Paw Cleaning Ramp	12
• Daily Use	12,13
• Setting the Clock	13
• Programming the Sleep Timer	13,14
Care & Cleaning	14
• Removing the Waste Receptacle	14
• Weekly Cleaning	14
• Paw Cleaning Ramp	14
• Motion Sensors & Top Housing	15
• Thorough Cleaning	15
• Rake Removal & Cleaning	15
• Litter Tray Cleaning	15,16
• Replacing Batteries	16

GETTING TO KNOW YOUR LITTERMAID® LITTER BOX

Product may vary slightly from what is illustrated.

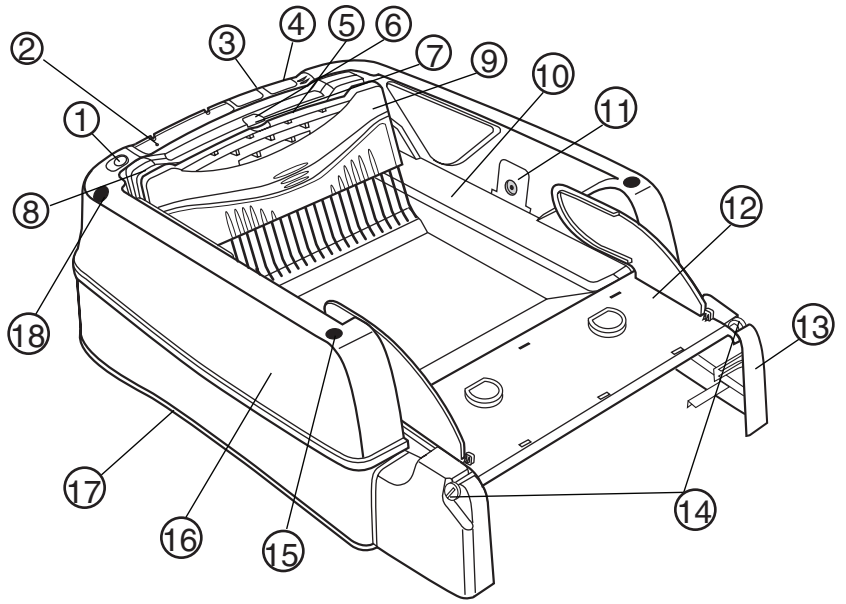

A1

LITTER BOX PARTS

1. **On/Off Button**
   Turns the litter box on and off. You can also use this switch to activate the cleaning cycle manually by turning it off, then on again.
2. **MODE Indicator Light**
   Indicates the current mode of litter box (see MODE INDICATOR LIGHT instructions for details)

† 3. **Battery Compartment Cover (Part # 7688-9080)**
   Takes 8, AA batteries (not included). Use only for backup power during outages!

4. **AC Adapter Outlet**
   Plug in for regular power and daily usage.
5. **Safety Bar (behind rake)**
   During use, the safety bar behind the rake will stop and reverse the raking action in case your cat jumps behind the rake during the cleaning cycle.
6. **Ionic Air Cleaner**
   Activated by the sensors at the start of the cleaning cycle to help reduce odors in the air as waste is moved into the receptacle.

† 7. **Green Ionizer Light**
   Turns on to indicate the ionic air cleaner is activated.

8. **Motor Housing**
   Houses the rake motor; located directly behind the rake.

† 9. **Removable Stainless Steel Rake (Part # 7688-6081)**
   Activates during the cleaning cycle, then removes for easy cleaning.

† 10. **Litter Tray (Part # 7686-8050)**
   Fill only with premium hard clumping litter to ensure proper operation.

11. **Motion Sensors (both sides)**
   Activate the cleaning cycle. You can also cover one sensor for about 10 seconds to activate the cleaning cycle manually.

† 12. **Waste Receptacle Compartment Cover with Flaps (Part # LME9000-02)**
   Place the waste receptacle underneath and attach the receptacle lid to the compartment cover for automatic cleaning.

13. **Receptacle Supports (Part # 7001-1050 (R), 7001-2050 (L))**
    Hold the waste receptacle in place during use.
14. **Paw Cleaning Ramp Attachment Points (both sides)**
    Use to attach the paw cleaning ramp accessory.
15. **Plug holes for plug 1 (both sides)**
    Can also be used to attach a Cat Privacy Tent accessory (see ADDITIONAL ACCESSORIES FOR PURCHASE).
16. **Top Housing**
    Contains functioning parts; remove for thorough cleaning (see CARE & CLEANING).
17. **Cutout handles (both sides)**
    Allows for easy lifting of litter tray during cleaning and litter box transport
18. **Plug holes for plug 2 (both sides)**
    Can also be used to attach a Cat Privacy Tent accessory (see ADDITIONAL ACCESSORIES FOR PURCHASE)

Note: † indicates consumer replaceable/removable parts

CONTROL PANEL

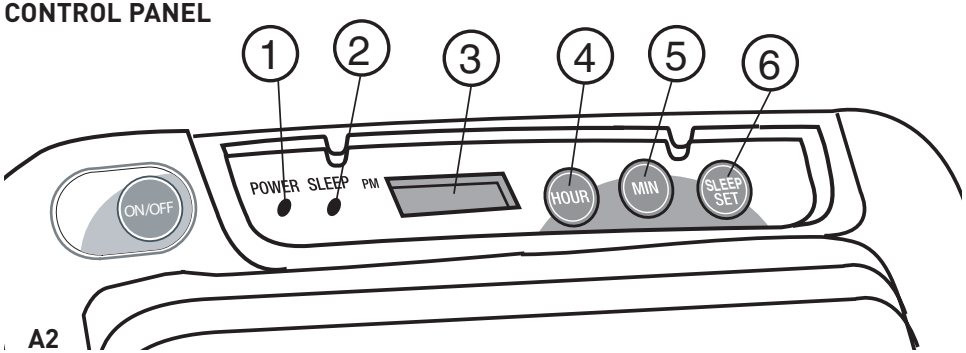

1. **Green POWER indicator light**
   Turns on when unit is powered on; also shows MODE indications (see below)
2. **Red SLEEP indicator light**
   Turns on when sleep mode is active; blinks during sleep timer programming
3. **Digital clock**
   Displays time; also displays sleep timer setting during sleep timer programming
4. **HOUR button**
   Sets the hour on the clock and sleep timer
5. **Minute (MIN) button**
   Sets the minutes on the clock and sleep timer
6. **SLEEP SET button**
   Used to set the sleep timer (see PROGRAMMING THE SLEEP TIMER)

Note: The green ionizer light on the front of the rake is for the ionic air cleaner only. When the air cleaner is on, the light will be green.

Green POWER Indicator Light

Light	Mode
No light	Litter box is off.
Constant light	Litter box is powered on.
Slow blinking (blinks 1 time every second)	Litter box is in LOW POWER mode – indicates low battery power; replace the batteries (See TROUBLESHOOTING for details.)
Fast blinking (blinks 2 times every second)	Litter box has encountered a potential blockage and is in FAULT mode. The rake will automatically cycle 5 times to attempt to clear the blockage; if unsuccessful, the POWER light will blink and the rake will return to the home position. (See TROUBLESHOOTING for details.)

Red SLEEP Indicator Light

Light	Mode
No light	Sleep timer is not set to run. Sleep timer mode has not been activated.
Constant light	Sleep timer is active; sleep timer mode will run at set time.
Blinking light	Sleep timer is in programming mode; light will turn off once sleep timer is set

Note: If both the green POWER and red SLEEP lights are blinking, this indicates a switch malfunction (see TROUBLESHOOTING for more information).

INCLUDED ACCESSORIES

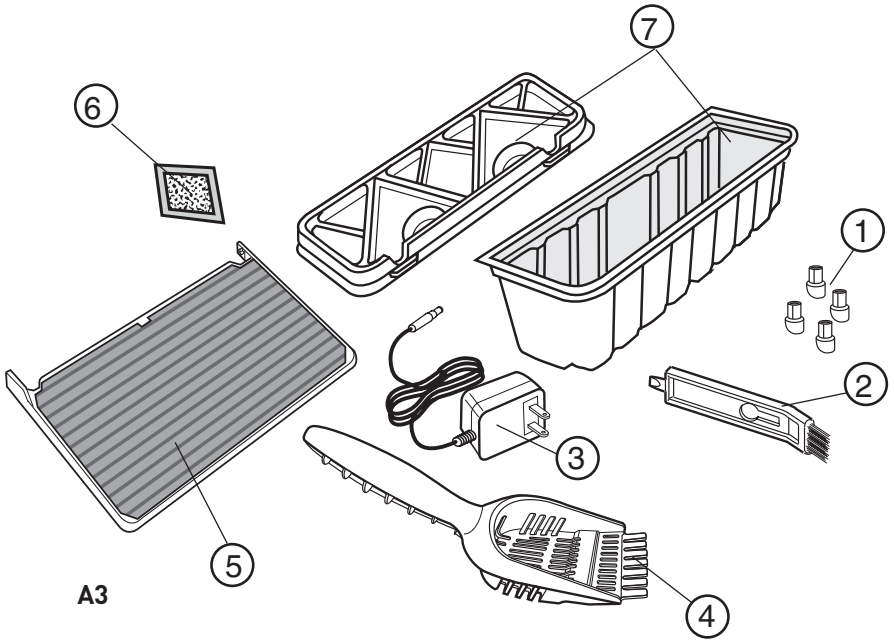

A3

† 1. **Plugs (4) (Part # 7003-3080 (Plug 1), 7003-4080 (Plug 2))**
Used to plug the holes on the top housing if a Cat Privacy Tent is not being used.

† 2. **Cleaning Brush (Part # 5125-0074)**
Assists in cleaning crevices on top housing.

† 3. **AC Adapter (Part # 4101-1022)**
Plug into the AC adapter outlet for regular power.

† 4. **Scoop & Rake Cleaner (Part # 7003-5050)**
Use to clean the automatic rake, assist in measuring the litter level and for daily spot maintenance.

† 5. **Paw Cleaning Ramp (Part # 5506-3146)**
Provides easy entrance and exit to the litter box for your cat as it cleans loose litter from paws.

† 6. **Carbon Filter (Part # LMF200 (12 pk.))**
Helps reduce odors around the receptacle.

† 7. **Waste Receptacle & Receptacle Lid (Part # LMR200 (12 pk.), LMR300 (18 pk.))**
Heavy-gauge plastic contains waste with a sealable lid to help contain odors.

Note: † indicates consumer replaceable/removable parts

ADDITIONAL ACCESSORIES FOR PURCHASE

See Products/Accessories on littermaid.com

Purchase additional accessories for your LitterMaid® system, like a Litter Box Carpet or Cat Privacy Tent directly from our website.

SELECTING LITTER

Your LitterMaid® system is designed to work with any premium hard clumping cat litter, so you can choose the litter that best suits your cat. We recommend the following:

- LitterMaid® Premium Natural Clumping Cat Litter
- World's Best Cat Litter™
- ARM & HAMMER® Super Scoop® The Baking Soda Clumping Litter*
- Fresh Step® Scoopable Premium Cat Litter**
- EVER CLEAN® Premium Clumping Litter**

Tip: For optimal performance, use with LitterMaid® Premium Natural Clumping Cat Litter.

Important: Do not use non-clumping litter, crystal or pearl-like litters.

See Litter Selection on littermaid.com

* ARM & HAMMER® and Super Scoop® are registered trademarks of Church & Dwight Co., Inc.
** EVER CLE AN® and Fresh Step® are registered trademarks of The Clorox Pet Products Company Church & Dwight Co., and The Clorox Pet Products Company have no association, sponsorship, or affiliation with Applica Consumer Products, Inc.

ACCLIMATING YOUR CAT

Some cats are finicky when it comes to their litter box area. In some cases, your cat may need to get used to its LitterMaid® Litter Box, which means you will need to acclimate your cat before removing your old box.

See Acclimating Your Cat on littermaid.com

1. Place your LitterMaid® Litter Box next to your old litter box. Set it to run automatically by turning the on/off button on.
2. Do not clean previous litter box. (Since cats prefer to use a clean box and the LitterMaid® Litter Box will always be clean, they will transition to the new box on their own.)
3. If your cat seems timid around the LitterMaid® Litter Box, turn it off so it will not run automatically for 2 to 3 days.
4. Each day, manually activate the box 2 to 3 times a day to allow cat to get used to it before setting it to clean automatically.
5. As soon as your cat is acclimated, set your Littermaid® Litter Box to clean automatically.
6. Remove previous litter box.

How to Use

GETTING STARTED

Note: No tools required for setup.

1. Unpack all parts and accessories listed in the LITTER BOX PARTS section of this Use & Care manual. If applicable, remove any stickers.
2. Find a location for your LitterMaid® Litter Box in a clean, dry place.

Note: For optimal performance, do not place your LitterMaid® litter box in moist environment or in direct sunlight.

3. Cut or remove restraints on the underside of the unit.

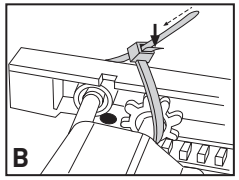
B

4. Before use, remove the zip tie wraps on each end of the motor housing **(B)**.
5. To set up backup battery power, push up on the ridges of the battery compartment cover, then remove battery door.

Note: Battery compartment takes 8 "AA" cell batteries. (Batteries not included.)

Important: Do not mix old and new batteries. Do not mix alkaline and carbon-zinc (standard) batteries. Do not use rechargeable type (Ni-Cad, Ni-MH or Li-ion) batteries.

ASSEMBLY

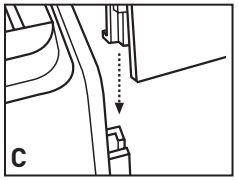
C

1. Slide receptacle supports marked L (left) and R (right) into grooves on front of the litter tray until they lock into place **(C)**.
2. Place both left and right flaps flat on top of the waste receptacle compartment panel.

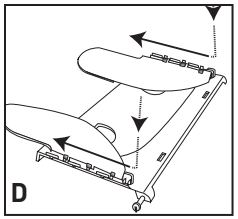
D

3. Push the flaps in and up until they click into place **(D)**.

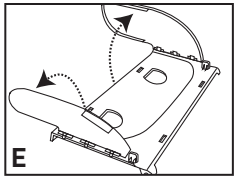
E

4. Lift the flaps until they lock into place **(E)**.

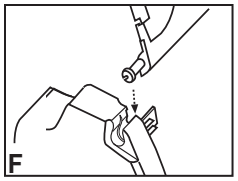
F

5. Snap each pivot of the waste receptacle compartment cover, one at a time, into notches in the receptacle supports **(F)**.
6. Open waste receptacle compartment cover.

Important: Waste receptacle compartment cover must be opened to remove and install top housing.

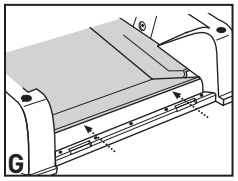
G

7. Lift top housing. Angle into position bracket end of top housing under tray ledge.

Important: White bar in front of the top housing must be under the front edge of the litter tray (G).

8. Bring the other end of top housing down so that it snaps into place. Check to be sure top housing is positioned securely on the tray.
9. If Cat Privacy Tent is not being used, place one of the plugs in each of the plug holes on the top housing.

PREPARING THE WASTE RECEPTACLE

1. Open waste receptacle compartment cover.
2. Place disposable waste receptacle into the waste receptacle compartment. Make sure the receptacle is aligned properly with the receptacle supports.

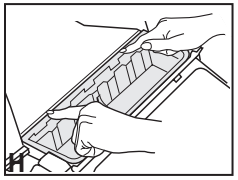
H

3. Make sure the front edge of the waste receptacle is under the edge of the top housing, between it and the edge of the litter tray **(H)**.

Note: There should be no gap between the litter tray and the waste receptacle.

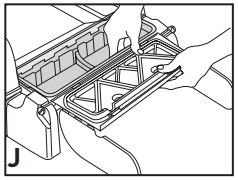
J

4. Attach the waste receptacle lid by inserting PUSH tabs into the round holes. To secure, press in and down at the positions indicated to slip the edges of the lid under the tabs on the waste receptacle compartment cover (both sides) **(J)**.

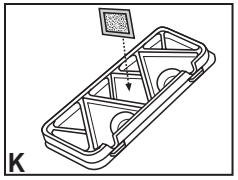
K

5. Remove carbon filter from plastic sleeve. Peel off paper strip to expose the adhesive. Place filter adhesive side down in diamond-shaped insert in the center of the waste receptacle lid **(K).**
6. Close waste receptacle compartment cover.

FILLING LITTER TRAY

1. Fill your box so the litter level is between the MIN and MAX fill lines on either side of the litter box.
2. Use the scoop & rake cleaner to evenly distribute litter in the litter tray.

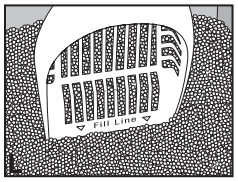

Tip: To measure litter at the center of the box, insert the scoop & rake cleaner, scoop down, into the center of the litter tray. The Fill Line on the scoop is even with the MAX fill line on the tray **(L)**.

Important: Do not overfill unit or it will not operate properly.

ATTACHING PAW CLEANING RAMP

1. The paw cleaning ramp has two notches that snap onto the paw cleaning ramp attachment points on the top housing, directly in front of the waste receptacle compartment cover.
2. Position the paw cleaning ramp with the carpet side facing up.

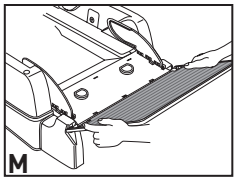

3. Place the notches into the paw cleaning ramp attachment points on either side of the unit **(M)**.
4. Tug slightly on ramp to ensure that it is firmly in place.

INSTALLING RAKE

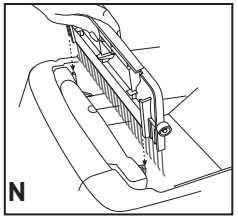

1. Align tracks on back of rake (each end) and slide into grooves on motor housing **(N)**.

DAILY USE

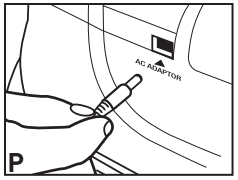

1. Remove AC adapter from packaging and plug into the AC adapter outlet at the back of the top housing **(P)**. Plug cord into a standard electrical outlet.
2. Turn the ON/OFF switch to ON; the green POWER indicator light will turn on.

Note: The rake will automatically run through a cleaning cycle to smooth out litter.

Important: Unit will not start CLEANING cycle while cat is in the box.

3. For daily use, your cat enters the litter box. Once it leaves, the motion sensors will activate CLEANING cycle. (Sensors must be blocked for at least 10 seconds to activate CLEANING cycle.)
4. The ionizer light will be green, indicating that the ionic air cleaner is working.
5. After 10 minutes, the automatic rake moves forward and back to scoop waste clumps into the waste receptacle.

Note: If the cat reenters and leaves the litter box before the initial 10 minutes have past, the timer will automatically reset and delay the rake action for an additional 10 minutes.

Note: Rake will stop and reverse direction if the safety bar touches any object behind the rake as it cycles.

Important: If the rake encounters a blockage, it will attempt to complete its cleaning cycle 5 times. If unsuccessful, the LED light will blink quickly (see TROUBLESHOOTING for more details).

6. If small litter particles remain in the litter tray after the rake has completed a cycle, you can use the scoop & rake cleaner to move these particles to the waste receptacle.
7. If clumps of litter become stuck to the rake, use the teeth on the scoop & rake cleaner to clean between the teeth on the rake.
8. The disposable waste receptacle will keep odors and waste trapped until you are ready to replace the receptacle. Once the receptacle is full, remove and replace as instructed in REMOVING THE WASTE RECEPTACLE.

SETTING THE CLOCK

Note: The display will blink 12:00 until the clock is set; however, the litter box can operate normally without the clock being set.

1. Set the clock to the time of day by pressing the HOUR button then minute (MIN) button.

Note: If setting P.M., be sure light in the upper left corner of the display is lit.

PROGRAMMING THE SLEEP TIMER

Sleep mode deactivates the rake cleaning cycle for 9 hours. During this time, the ionic air cleaner automatically turns on for 10 minutes every hour to freshen the air.

After 9 hours, the rake will perform one cleaning cycle and then resume normal operation. The 9-hour sleep mode and the 15-hour normal operation repeat at set time every each day.

To Program the Sleep Timer:

1. Set the clock as instructed above.
2. Press the SLEEP SET button on the control panel to begin programming; the red SLEEP indicator light starts blinking.
3. Press the HOUR and minute (MIN) buttons to set the sleep timer to the time you want the sleep mode to begin.

Note: If setting P.M., be sure light in the upper left corner of the display is lit.

4. The sleep mode time will be automatically accepted if no buttons are pressed for 3 seconds or more. The red SLEEP indicator light stops blinking and turns off.
5. Sleep mode time is now set, but not activated.

To Activate Sleep Timer:

1. Press and hold the SLEEP SET button.
2. Red SLEEP indicator light comes on and stays constant; this indicates the

sleep timer is active.

To Deactivate Sleep Timer:

1. Sleep timer must be active (red SLEEP indicator would be lit) to be deactivated.
2. Press the SLEEP SET button. The red SLEEP indicator light will turn off to indicate the sleep timer has been deactivated.

Care and Cleaning

Note: Your LitterMaid® Litter Box is designed to minimize daily maintenance, so you basically only need to replace the waste receptacle and follow the instructions for weekly cleaning. More thorough cleaning is recommended once a month.

REMOVING THE WASTE RECEPTACLE

Caution: We recommend avoiding contact with waste material. Wear rubber or latex gloves when handling used waste receptacle, particularly if you are pregnant or have an immunodeficiency.

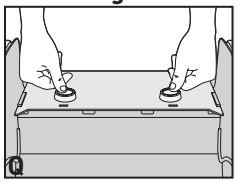

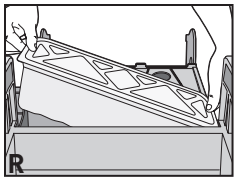

1. Press on the PUSH tabs on the waste receptacle lid to detach from the waste receptacle compartment cover **(Q)**.
2. Lift compartment cover; waste receptacle lid should already be detached and closed on the waste receptacle.
3. Press in on the four corners of waste receptacle lid to make sure it is secure.
4. Pull the disposable waste receptacle edge free from the litter tray edge holding it in place **(R)**.
5. Lift out and dispose.
6. Place a new receptacle, following the instructions in PREPARING THE WASTE RECEPTACLE.

WEEKLY CLEANING

Paw Cleaning Ramp

Note: The paw cleaning ramp is designed to remove litter from your cat's paws as it exits the litter box. As such, litter will get stuck to the carpet as your cat uses the box daily.

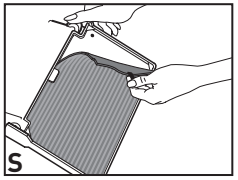

1. Grasp the ramp on either side near the attachment points and lift up gently.
2. Holding the ramp over the litter box to avoid scattering litter, grasp the carpet by the nylon pull tab on one side and lift up to remove **(S)**.
3. Shake the mat to remove loose litter particles.
4. Tip over and empty the carpet holder to ensure no litter remains trapped under the carpet.

5. Replace the carpet by sliding the four corners of the carpet under the four holder points on the corners of the ramp. Also make sure the tab at the back of the ramp is over the carpet to hold it in place.

Note: The carpet and ramp are both cut in on the back side near the attachment points. Always make sure you are putting the carpet into position correctly by matching the shape of the two pieces.

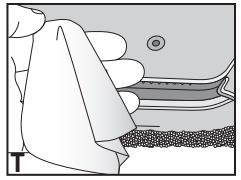

Motion Sensors & Top Housing

Note: The motion sensors on the inside walls of the litter box are what activate the CLEANING cycle. Keep sensors free of dust to ensure proper operation.

1. Use a soft, dry cloth or towel to gently wipe the sensors and remove any dust **(T)**.

2. Then, use the cloth to wipe the exterior surfaces of the top housing to maintain its appearance.

THOROUGH CLEANING

Note: Clean thoroughly once a month to ensure optimal operation.

Important: We recommend wearing rubber or latex gloves when handling the soiled rake or litter tray.

Rake Removal & Cleaning

Note: The rake is removable for thorough cleaning. For quick cleaning, you can simply use the teeth on the scoop & rake cleaner to clean between the teeth of the rake.

1. To remove the rake for cleaning, press the on/off button to the off position.
2. Grasp the rake at the top and pull up.

Important: Do not operate without the rake.

3. Wash the rake with a soft cloth using warm water and mild detergent. Dry thoroughly.

Note: Do not use scouring pads or harsh and abrasive chemicals.

4. To reinstall, align tracks on back of rake with grooves on motor housing and slide back into place.
5. Press the on/off button to the on position.

Note: The rake will automatically begin a cleaning cycle

Litter Tray Cleaning

Note: It is not necessary to clean the tray each time you refill. Litter tray cleaning is recommended every a month.

1. To remove the litter tray for cleaning, check to make sure rake is in home position.
2. Turn the on/off button to off.
3. Unplug the unit from the AC adapter and remove batteries to prevent accidental activation.

4. Remove the waste receptacle prior to disassembling.
5. Lift the top housing forward and up to disengage from the litter tray.
6. Dispose of any used litter in the litter tray. To ensure proper disposal of litter, follow manufacturer's instructions on litter package.
7. Wipe the litter tray with a damp cloth. If further cleaning is necessary, the litter tray can be fully immersed in water and washed with a mild detergent.

Important: Do not soak or immerse top housing in water.

8. Dry litter tray thoroughly before reassembling.

Tip: Before reassembling, you can spray the inside of the litter tray surface with nonstick cooking spray or silicone spray, and wipe with a soft, dry cloth. This will help to prevent clumps from adhering to surface of the tray.

9. Place the litter tray on a flat surface. Carefully lower top housing onto the litter tray, following the instructions in ASSEMBLY to make sure the front edge of the top housing is connected properly to the front of the litter tray.

REPLACING BATTERIES

Note: Battery power is not sufficient for the litter box to function regularly and should only be used during a power outage – not as the main power source.

1. Turn the on/off button off and unplug the unit.
2. Press back with your thumb to slide the battery compartment cover off the top housing.

TROUBLESHOOTING

See FAQ on littermaid.com

Problem	Possible Cause	Solution
Mode indicator light blinks quickly; (twice per second) rake moves continuously.	Litter box is in FAULT mode. The rake has encountered a blockage – either in front of or behind the rake. There may also be loose litter piled behind the rake that's preventing it from returning to the home position. As a result, the rake cannot complete its normal cycle. (**Note:** The rake will automatically cycle 5 times to attempt to clear the blockage; if unsuccessful, the green POWER light will blink and the rake will return to the home position.)	Turn the on/off button off and unplug the unit. Use the scoop & rake cleaner to clear any clumps or blockages that are preventing the rake from completing its cycle, as well as to level off the litter level, so the level is below the MAX line throughout the tray. Once blockages are removed, plug in and turn the on/off button on. If the unit still does not function correctly, make sure the return plunger (located on the front right side of the rake track) is not stuck – it should be out.
Problem	**Possible Cause**	**Solution**
Mode indicator light blinks slowly (once per second).	Litter box is in LOW POWER mode – indicates low battery power and the rake function is disabled.	Check to make sure the litter box is plugged into a working outlet. Replace the batteries as instructed in CARE AND CLEANING (**Note:** battery power is meant to be used during an outage only; it does not provide enough power to run the unit continuously.)
Rake does not move after the cat exits the litter box and 10 minutes have passed.	Sensors may be dusty; sleep timer may be active.	Wipe the sensors with a soft, dry cloth to remove any dust. Check to see if red SLEEP indicator light is on, indicating sleep timer is active and rake cycle is disabled.
Rake does not completely clean litter box.	Low-quality litter may have been used.	Always use premium hard clumping cat litter. See SELECTING LITTER for more details.

Waste clumps stick to the litter tray.	Litter tray surface may need cleaning.	Clean litter tray as instructed in THOROUGH CLEANING.
Mode indicator light does not turn on when on/off button is turned on.	Litter box is not receiving power.	Check to be sure that the unit is plugged into a working outlet; during an outage check to make sure the batteries are working. (**Note:** battery power is meant to be used during an outage only; it does not provide enough power to run the unit continuously.)

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate "800" number on the cover of this book. **Do not** return the product to the place of purchase. **Do not** mail the product back to the manufacturer nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

One-Year Limited Warranty
(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship; provided; however, Applica's liability will not exceed the purchase price of the product

For how long?

- One year from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished

How do you get service?

- Save your receipt as proof of the date of sale.
- Check our on-line service site at www.prodprotect.com/applica, or call our toll-free number, 1-800-548-6243, for general warranty service
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

Copyright © 2010 Applica Consumer Products, Inc.

Made in People's Republic of China
Printed in People's Republic of China

2010/4-8-26E